


BASS SYNTHESIZER BSY600



Thank you for showing your confidence in us by purchasing the BEHRINGER BASS SYNTHESIZER BSY600. This high-quality effects pedal reproduces the fat and powerful sound of classic analog synthesizers—at the touch of a footswitch.

1. CONTROLS

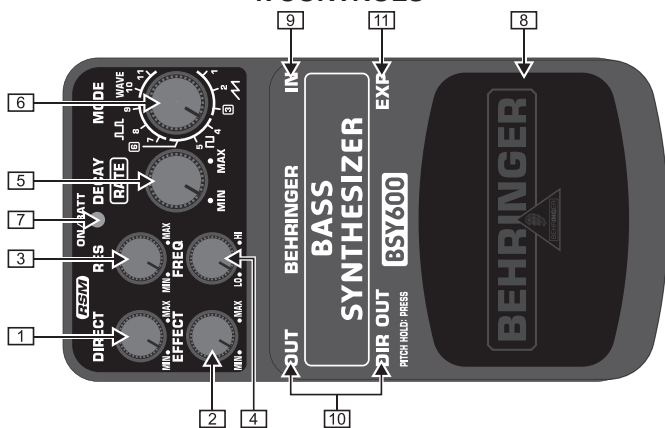

Top view


- 1 The **DIRECT** control adjusts the level of the direct, unaffected signal.
- 2 The **EFFECT** control adjusts the level of the synthesizer effect signal.
- 3 The **RES(onance)** control adjusts the strength of the low-pass filter frequency peak (see below).
- 4 The **FREQ(ueency)** control adjusts the low-pass/allpass filter frequency which cuts the high-frequencies and therefore determines the upper and lower limit of the frequency range the filter moves along.
- 5 The **DECAY/RATE** control has 2 different functions. Depending on the **MODE** switch position (see below) it adjusts either the LFO speed that modulates the amplitude of the filter frequency (**RATE**: mode 3 and 6 only) or sets the time over which the filter frequency moves (**DECAY**). When the decay time is set to **MAX**, the cut-off filter frequency is fixed.
- 6 Use the **MODE** switch to dial up one of 11 synthesizer modes with 4 different waveforms.
 1. **SAW** (sawtooth wave that produces sharp-edged sound)
 2. **SAW** (sawtooth wave one octave lower than mode 1)
 3. **SAW** (sawtooth wave with automatic filter frequency shifting)
 4. **SQUARE** (square wave that produces milder sound than the sawtooth modes)
 5. **SQUARE** (similar to mode 4 with additional square wave one octave below)
 6. **SQUARE** (square wave with automatic filter frequency shifting)
 7. **PULSE** (pulse wave that produces sharp-edged sound different from sawtooth modes)
 8. **PULSE** (pulse wave with all-pass filter for more depth and motion)
 9. **PULSE** (pulse wave with pulse width modulation for fat, spreading sound)
 10. **WAVE** (input signal is directly transformed to a synthesizer sound. Filter *rises* when string is played and returns gradually)
 11. **WAVE** (similar to mode 10, but filter *drops* when string is played and returns gradually)
- 7 The **ON/BATT** LED illuminates when the effect is activated and flashes when the **PITCH HOLD** function is active (see below). It also serves as a battery level indicator.
- 8 Use the footswitch to activate/deactivate the effect. Keeping the footswitch depressed will activate the **PITCH HOLD** function (modes 1 - 9 only) that causes the unit to output the effect signal continuously, even if the bass is not played at this moment (**ON/BATT** LED flashes). You can also play the bass while keeping the footswitch pressed and mix the continuously output effect signal with the direct bass signal. Release the footswitch to deactivate this function.
- 9 Use this 1/4" TS **IN** connector to plug in the instrument cable.
- 10 The two 1/4" TS **OUT** and **DIR OUT** connectors send the signal to your amp. Use both connectors if you want to separate the unprocessed input signal (> **DIR OUT**) and the synthesized signal (> **OUT**). To mix both signals together use **OUT** only.
- 11 Use the 1/4" TRS **EXP(ression)** connector to connect an expression pedal. This way you can externally control the movement of the filter frequency (**DECAY**) or—for mode 3 and 6—the speed of the effect (**RATE**). When using an expression pedal the **DECAY/RATE** control determines the max. value (expression pedal fully pressed).

Use the **DC IN** connection to plug in a 9 V power supply (not included).

The **BATTERY COMPARTMENT** is located underneath the pedal cover. To install or replace the 9 V battery (not included), press the hinges with a ballpoint pen and remove the pedal cover. Be careful not to scratch the unit.

The BSY600 has no on/off switch. As soon as you insert the plug into the IN connector, the BSY600 begins running. When not using the BSY600, remove the plug from the IN connector. This extends the life of the battery.

The *SERIAL NUMBER* is located on the underside.

 In rare cases interferences of the normal function may appear by external influence (e.g. electrostatic discharge), as for example sound disturbances or malfunctions. If this occurs, please turn down the volume on subsequent amplifiers and disconnect the input connector briefly to restart the application.

2. WARRANTY

For our current warranty terms, please refer to our website at <http://www.behringer.com>.

3. SPECIFICATIONS

IN	Connector: 1/4" TS	Impedance: 500 kΩ
OUT	Connector: 1/4" TS	Impedance: 1 kΩ
DIR OUT	Connector: 1/4" TS	Impedance: 1 kΩ
Power supply	9 V \equiv , 100 mA, regulated BEHRINGER PSU-SB USA/Canada 120 V~, 60 Hz Europe/U.K./Australia 230 V~, 50 Hz China 220 V~, 50 Hz Korea 220 V~, 60 Hz Japan 100 V~, 50/60 Hz	
Power connector	2 mm DC jack, negative center	
Battery	9 V type 6LR61	
Power consumption	30 mA	
Dimensions (H x W x D)	approx. 54 mm (2 1/8") x 70 mm (2 3/4") x 123 mm (4 4/5")	
Weight	approx. 0.33 kg (0.73 lbs)	

BEHRINGER is constantly striving to maintain the highest professional standards. As a result of these efforts, modifications may be made from time to time to existing products without prior notice. Specifications and appearance may therefore differ from those listed or shown.

4. SAFETY INSTRUCTIONS

Do not use near water, or install near heat sources. Use only authorized attachments/accessories. Do not service product yourself. Contact our qualified servicing personnel for servicing or repairs, **especially when power supply cord or plug is damaged.**

No utilizar cerca de agua o instalar cerca de fuentes de calor. Utilice sólo accesorios y aditamentos autorizados. No intenté reparar el producto usted mismo. Contacte a nuestro personal técnico cualificado para servicio y reparaciones, **especialmente cuando la fuente o el cable de alimentación estén dañados.**

Не эксплуатируйте прибор вблизи от источников воды и тепла. Применяйте только авторизованные дополнительные устройства. Никогда не ремонтируйте прибор самостоятельно. Ремонт может производить только квалифицированный специализированный персонал, **особенно при повреждениях сетевого провода или сетевой вилки.**

水分の近くや、ヒーターなど熱気のある場所では使用しないでください。正式に認可された付属品のみを使用してください。製品はご自分では決して修理せず、特に電源コードもしくはプラグが損傷した場合には、必ず製品サービスおよびリペアの資格を有した当社の担当員にご相談ください。

不要在靠近水源的地方使用，或在靠近热源的地方安装。只使用经过许可的附件 / 配件。不要自己进行产品维修，**尤其是当电源线或插座损坏的时候**，请联系我们的专业服务人员有关产品维修事宜。

Die deutsche Anleitung ist erhältlich @ www.behringer.com
Manuel francophone en téléchargement sur www.behringer.com
Manual en español disponible en www.behringer.com
Manuali italiani disponibili @ www.behringer.com
Русскоязычное руководство @ www.behringer.com
Polska instrukcja dostępna jest pod adresem @ www.behringer.com
Nederlandse handleiding beschikbaar @ www.behringer.com
Suomenkielinen käyttöohje saatavilla osoitteesta www.behringer.com
Svensk manual finns tillgänglig på www.behringer.com
Dansk vejledning findes på @ www.behringer.com
Manual português disponível @ www.behringer.com
Ελληνικό εγχειρίδιο υπάρχει διαθέσιμο στη διεύθυνση www.behringer.com
日本語版マニュアル @ www.behringer.com
使用说明书可在 www.behringer.com 下载

Technical specifications and appearance subject to change without notice. The information contained herein is correct at the time of printing. BEHRINGER accepts no liability for any loss which may be suffered by any person who relies either wholly or in part upon any description, photograph or statement contained herein. Colours and specification may vary slightly from product. Products are sold through our authorised dealers only. Distributors and dealers are not agents of BEHRINGER and have absolutely no authority to bind BEHRINGER by any express or implied undertaking or representation. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording of any kind, for any purpose, without the express written permission of BEHRINGER International GmbH. BEHRINGER, the BEHRINGER logo and JUST LISTEN are trademarks of BEHRINGER. ALL RIGHTS RESERVED. © 2007 BEHRINGER International GmbH, Hanns-Martin-Schleyer-Str. 36-38, 47877 Willich-Müncheheide II, Germany. Tel. +49 2154 9206 0, Fax +49 2154 9206 4903

FEDERAL COMMUNICATIONS COMMISSION

COMPLIANCE INFORMATION



Responsible party name: **MUSIC Group Services USA, Inc.**

Address: **18912 North Creek Parkway,
Suite 200 Bothell, WA 98011,
USA**

Phone/Fax No.: **Phone: +1 425 672 0816
Fax: +1 425 673 7647**

BASS SYNTHESIZER BSY600

complies with the FCC rules as mentioned in the following paragraph:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Important information:

Changes or modifications to the equipment not expressly approved by MUSIC Group can void the user's authority to use the equipment.